


Soffit Details

This section shows the two most common ways to install Novabrik at the top of the wall. Best results will be achieved by running Novabrik up into the open eave and installing a new soffit.


On gable ends, install a new soffit against the Novabrik wall or use a shadow box.

New Soffit

- Install Novabrik up beyond the soffit line.
- Cut the bricks to fit under the roof trusses if necessary.

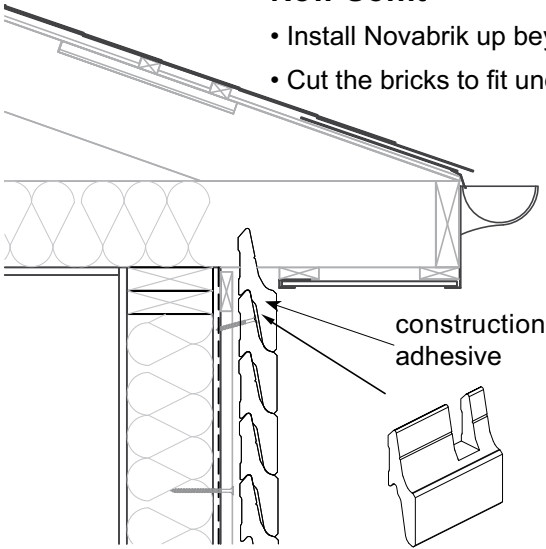

- Secure the second course from the top with corrosion-resistant screws.
- Set the last course in place with construction adhesive.
- Install new soffit, resting the j-trim against the Novabrik face.
- On gable ends, you may need to cut the top of the bricks at an angle.

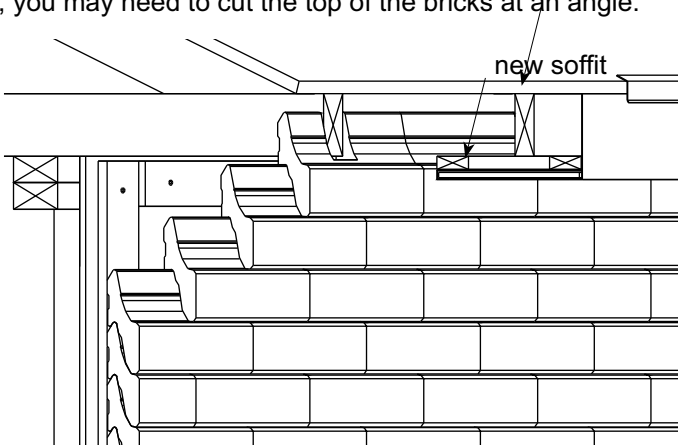

Soffit Details

Existing Soffit

- Install full bricks as high as possible.
- Cut the top of the brick to fit under the existing soffit.
- Insert a filler piece and attach with construction adhesive.
- You can also install a soldier course up to the soffit.

